



NOTE A: THE THERMOSTAT NEEDS TO BE WIRED BACK TO THE MCC.
NOTE B: THE LEAD PUMP SWITCH ONLY TAKES EFFECT WHEN THE SYSTEM STARTS, AFTER THE SYSTEM IS RUNNING THE LEAD PUMP IS CONTROLLED BY DCS INTERLOCK 1-114.